Step 1:
Screw the plastic bracket into the bottom of the drawer. Repeat for the bracket on the opposite side.

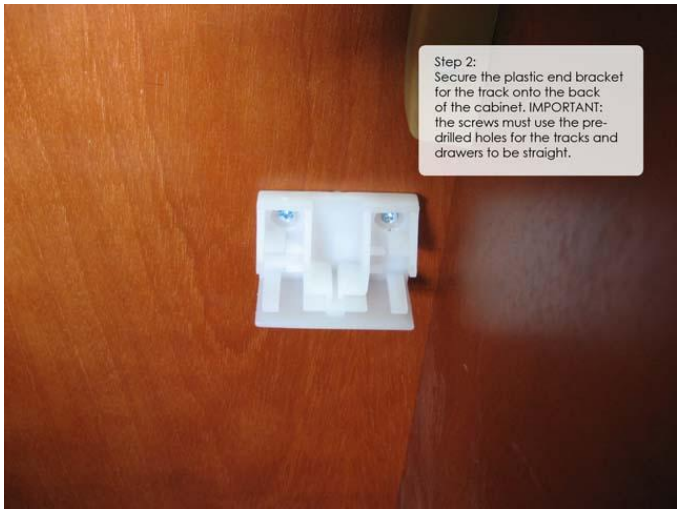
Step 2:
Secure the plastic end bracket for the track onto the back of the cabinet. IMPORTANT: the screws must use the pre-drilled holes for the tracks and drawers to be straight.

Step 3:
Rest the track onto the plastic bracket.

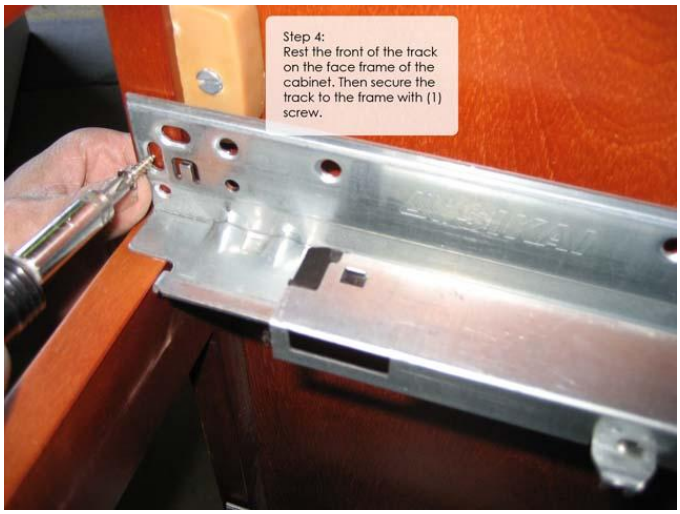
Step 4:
Rest the front of the track on the face frame of the cabinet. Then secure the track to the frame with (1) screw.

Step 5:
Slide out the mid section of the track.

Step 6:
Rest the drawer on top of tracks.